

*Future Foresee* **MASSAGE CHAIR**  
*A155* Operation Instructions

**SAVE THESE INSTRUCTIONS**



※Products refer to the actual product, without prior notice.

Thanks for purchasing this product. Please read this manual instruction carefully in order to know how to use this product correctly before operation. Please pay more attention to some important safety warning and keep this manual book properly for future use.

Note: Our Company reserves the right to revise the design and description of this product without any further notice. Please refer to the actual color of this product.

## **CONTENTS**

---

Safety and maintenance	02
Name and function of components	04
Function	05
Method of usage	06
Product specification	10

## Safety And Maintenance

### 1. Important Safety Warning.

- Don't allow children to touch moveable part of this product.
- Please use well-grounding power supply suited to this product.
- Please pull out the plug after use or before cleaning to avoid injury or Damage to the product.
- Please operate this product according to this manual instruction.
- Don't use accessories which are not recommended.
- Don't use this product outdoors.
- Please read this manual instruction carefully before operation.
- Any other usage that is not listed in this manual instruction is forbidden.
- 20 minutes of usage each time is recommended.
- Please don't use it if the leather is broken or damaged.
- Please don't use it if the cover or leather is damaged.
- Please don't use it if the radiator hole is covered or blocked.
- Please don't drop anything into this product.
- Please don't fall asleep while using this product.
- Please don't use it if drunk or feel unwell.
- Please don't use it within one hour after having meal.
- Please don't make the massage function too strong for avoiding Injury.

### 2. Environment for usage.

- Please don't use it under high temperature and moist environment such as bathroom.
- Please don't use it immediately while the environmental temperature changes sharply.
- Please don't use it under heavy-dusty or caustic environment.
- Please don't use it where there is not enough space or not good ventilation.

### 3. People who are not suitable to use this product.

- People who are suffering from osteoporosis are not suitable to use this product.
- People who are suffering from heart disease or carrying electronic medical equipment such as heart pacemaker are not suitable to use this product.
- People who are suffering from fever are not suitable to use this product.
- Pregnant women or women that are in menses period are not suitable to use this product.
- People who got injured or skin disease are not suitable to use this product.
- Children under 14-year old or people mentally unbalanced without being Supervised are not allowed to use this machine.
- People who are told by doctor to have rest or people who feel unwell are not suitable to use this product.
- People whose bodies are wet are forbidden to use this product.

### 4. Safety.

- Check the voltage if it is suitable to the specification of this product.
- Don't use wet hand to pull the plug.
- Don't make water go inside this product to avoid electric shock or cause damage to this product.
- Don't damage the wires or change the circuit of this product.
- Don't use wet cloth to clean the electric parts such as switch and plug.
- Be away from this product under power cut state to avoid injury if the power comeback suddenly.

## Safety And Maintenance

- Stop using this product while it works abnormal, and please consult local agent immediately.
- Stop using this product if you feel unwell, and please consult health care doctor.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its Service agent or similarly qualified persons in order to avoid a hazard.

### 5. Maintenance.

- This product should be maintained by certain appointed agents, users are prohibited to disassemble or maintain by themselves.
- Please don't forget to cut the power after usage.
- Don't use this product if the socket looses.
- If this product will be left unused for long, please curl up the wires and reserve this product in dry and dustless environment.
- Don't reserve this product under high temperature or near fire and avoid longtime direct sunshine.
- If the detachable cord / supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a Hazard.
- Please clean this product by dry cloth. Don't use thinner, benzene or alcohol.
- The mechanical components of this product are specially designed and made, it is not necessary to be specially maintained.
- Don't use edged res to thrust this product.
- Don't roll or pull this product above uneven ground, it should be lifted before moving.
- Please use it intermittently; don't make this product work continuously for long.
- The appliance has a heated surface. Persons insensitive to heat must be careful when using the appliance.


### 6. Solution of ordinary malfunctions.

- It is nature movement voice if the motor sounds while in usage.
- If the controller can't work normally, please check the plug and socket if they are connected strongly and make sure the switch is turned on.
- If the rated working time is over, the product will automatically activate the power-off button; If this product works continuously for long, the temperature protector will make the product automatically power-off, it should be used again after half an hour's rest.




### SAFETY WARNING

The chair is not too heavy, children climb on it or stand on it and jump is forbidden, or else it would be cause the chair over load one side and damage the chair or personal injuries.

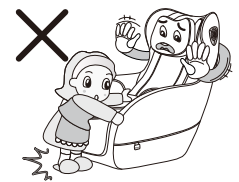


## Name And Function Of Components

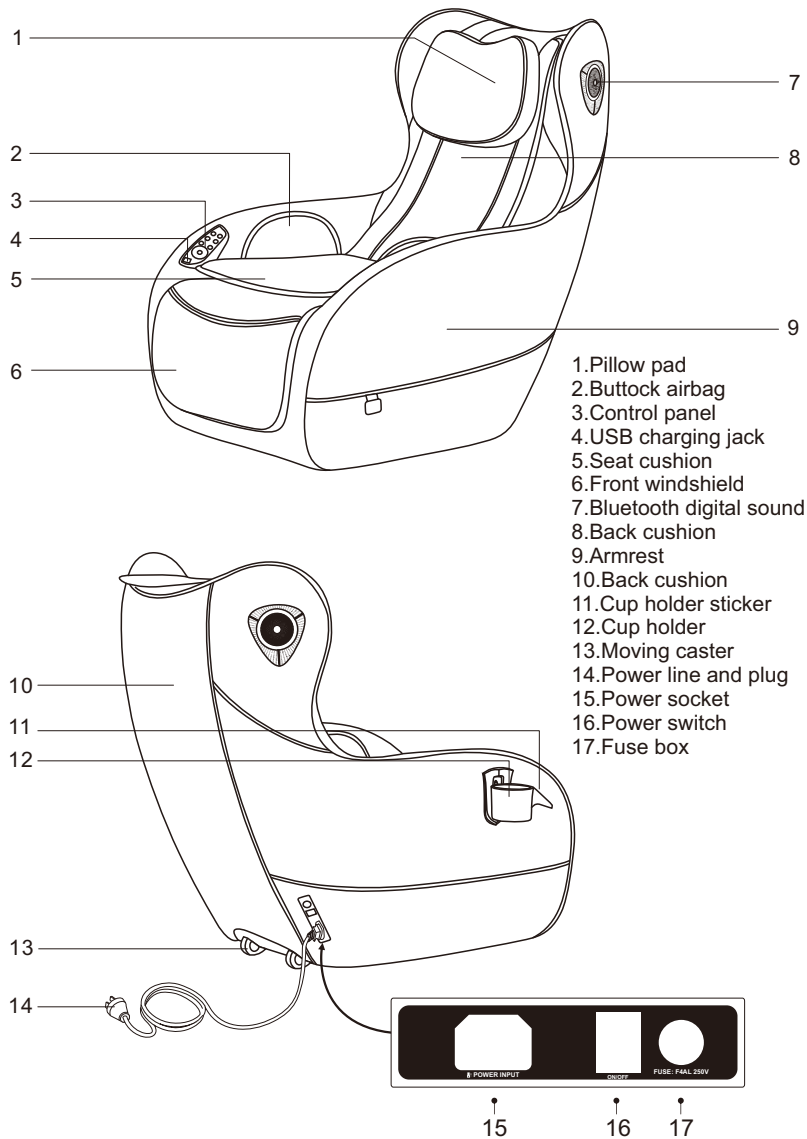

## Function

- This product is designed with 2 sets massage mechanism hands. One set is specially designed for neck. The other set massage mechanism can move up and down, four-wheel drive and muted design.
- Set with 3 simulation massage methods: kneading, tapping, sync with kneading and tapping.
- Set with auto massage function: auto I ,auto II ,autoIII and demo four auto modes.
- Set with massage mechanism hands can manually adjust position. Can positioning massage according to your needs. Have kneading and tapping function with 3 levels speed optional.
- Set with neck kneading massage independently: Have bidirectional kneading、one-way kneading optional. Can manually adjust neck & shoulder massage hands position.
- Set with air pressure massage function: Air pressure to the buttocks, 3 levels optional.
- Neck & shoulder heating function, use carbon fiber as infrared heating source.
- Set with USB charging jack.
- Connect to smart devices by blue tooth, can play music wireless.
- Have music playing system, with two 3D digital sound on your shoulders.
- SL supper long curve rail fits your body, can enjoy personal massage from shoulder to thigh.
- Massage hands restore automatically after turning off.
- The seat have extra cushion. Can relieve massage intensity on your buttocks. The users can decide whether use it or not. Or you can remove it.

## Method Of Usage

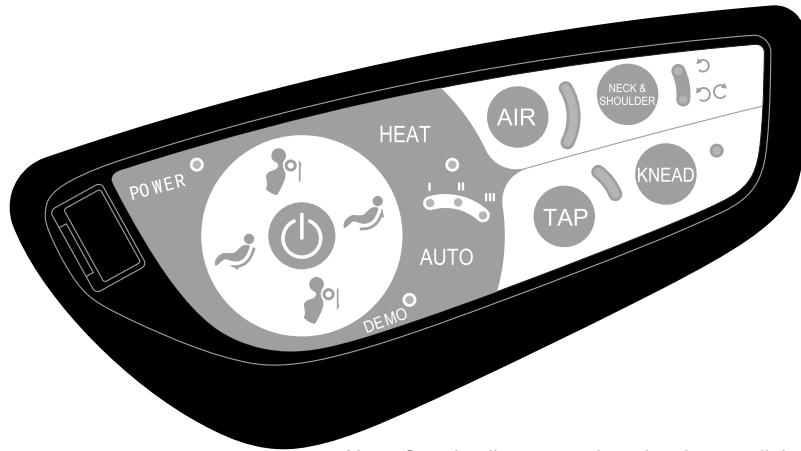

Note: See details on actual product buttons light.

### 1. Switch on the machine



### 2. Start to massage.

- ① Press the red button to start massage.
- ② Enter to Auto I mode automatically. You can choose other modes.

#### A)、Auto massage

Button	Description	Massage Features	Display
Auto massage	Auto	Auto I : Whole body massage, relax sore spot.	See the buttons light
		Auto II : Focus massage on neck and back.	See the buttons light
		Auto III: Focus massage on waist, buttocks and thigh.	See the buttons light
		Demo: Set with 5 minutes fast experience massage.	See the buttons light

## Method Of Usage

### B)、Manual massage

Button	Description	Massage Features	Display
Function	KNEAD	Press this button to open or close the kneading massage function.	See the buttons light
	TAP	Press this button to open or close the tapping massage function. Three levels optional: weak, medium and strong.	See the buttons light
Massage position adjustment		Massage hands move up.	See the buttons light
		Massage hands move down.	See the buttons light

### C)、Neck & shoulder massage

Button	Description	Massage Features	Display
Function	Neck & shoulder	Bidirectional kneading, one-way kneading.	See the buttons light
Neck & shoulder heating	Heating	Press this button to open or close heating function.	See the buttons light
Massage position adjustment		Neck & shoulder massage hands move up.	See the buttons light
		Neck & shoulder massage hands move down.	See the buttons light

### D)、Buttocks air pressure massage

Button	Description	Massage Features	Display
Air pressure	AIR	Air pressure massage on buttocks, 3 intensity adjustments: strong, medium and weak.	See the buttons light

## Method Of Usage

### 3.The manual of bluetooth speaker

#### Operational Method:

- Enter the Smart Device Menu , Turn on “Setting” --Choose “Bluetooth” --Turn on “Bluetooth” -- Auto Searching new Bluetooth devices.
- The Smart Device will find the relevant Bluetooth model as (IMCM-0066) , and ask if connect , Choose “YES” or “CONFIRM” .
- Enter the password “0000 or 1234” , Then “CONFIRM” to finish the match.
- Open your music player on the smart device and choose the music to play .

Attention : Every Bluetooth model is subject to the actual searched model , as “IMCM-0066or IMCM-0061 or IMCM-0088...etc” , Every Bluetooth is unique .

### 4.Turn off power, stop massage



- In massage process, press red button, or the time is out, all the massage function will stop, and the massage hand restore.
- After the restoration, turn off the power

Figure (Turn off the power)





### 5.Cup holder installation

- 1.Move massage chair out of the box (fig.1).
- 2.Take out the cup holder assembly from accessory bag. Align two clamping grooved holes of cup holder assembly with the convex ribs buckle of cup seat fixing plate. Press the cup holder down hard (fig2).

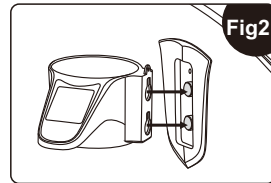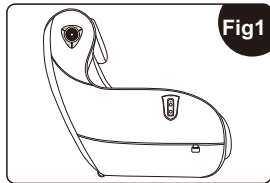


- 3.Fixed the cup holder on the cup seat with screws from the accessory(fig3).
- 4.After completing the cup holder installation, please check whether the installation is correct or firm or not (fig4).

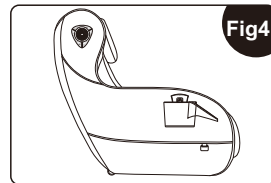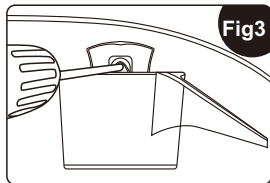

## Method Of Usage



### 6.Usage of the seat cushion

With extra cushion on your seat, can relieve the hardness on your buttock, the users can decide to use it or not. Or you can disassemble it.

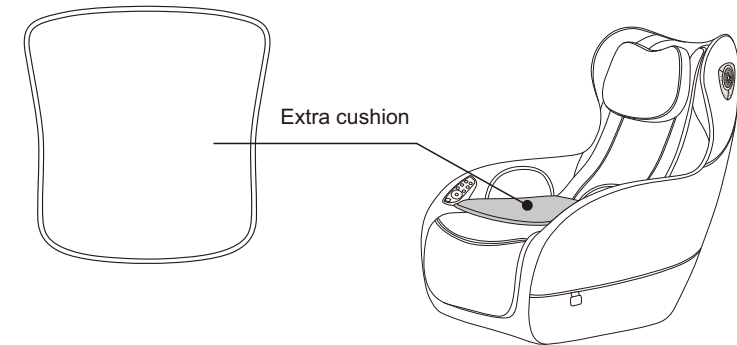

### 7.Floor protection


- Put the heavy massage chairs on the wood floor for a longtime may damage the floor, so please place a carpet or other object to avoid this damage

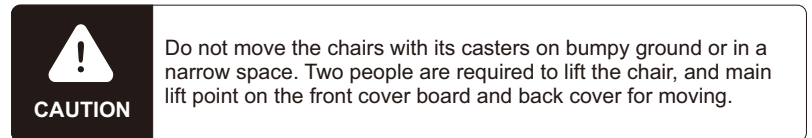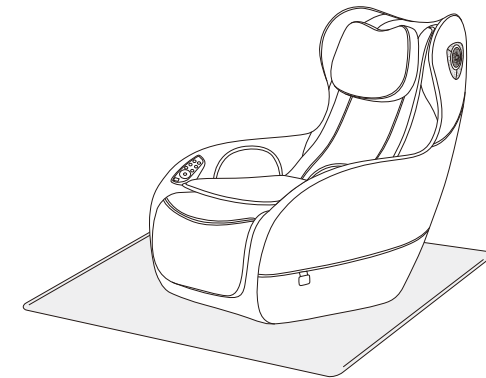

## Method Of Usage

### 8.Method of movement

While moving the massage chair, make sure that all power lines are far above the ground. Tilt backrest down to certain angle, with the gravity center resting on the casters (around 25 degrees). Push the chair forward or backward with your hands and finally resume the chair to the normal angle.

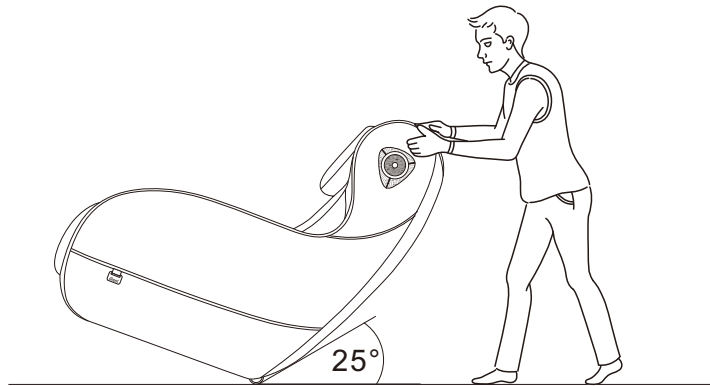

Make sure that the power off and take off the power line before moving

## Product Specification

Model: A155

Name: Massage Chair

Rated voltage: 110-120V~ 60Hz   
220-240V~ 50Hz/60Hz

Rated power input: 60W

Noise:  $\leq$  55dB

Rated time: 20Min

Safety structure: Class I

Material introduction: PVC, PA, steel parts and electric &ele-ctron parts

MATERIAL	PU	LEATHER	CLOTH	WOOD

